

Emergency Switcher
ES-6116



Emergency Switcher

ES-6116



- **AUTO FIRE SENSOR CONNECTOR**

- Connect to a fire sensor for a fully functional fire alarm.

- **SPEAKER SWITCHING DURING EMERGENCIES**

- Speaker switching can be performed manually or remotely using the Inter-M PX-6116.

- **FIRE AND SPEAKER SWITCHING INDICATOR**

- LED indicators show you the status of the speaker performance.

 
- **EXTENSION FUNCTION**

- Use the ES-6116 Emergency Switcher with an additional ES-6116.

- **WORKS FLAWLESSLY WITH OTHER INTER-M PRODUCTS**

- Use with the Inter-M PX-6116 Matrix and the Inter-M RG-6116 Relay Group.

FRONT/REAR PANEL




- | | |
|--------------------------------|--------------------------------|
| 1 EMERGENCY ALL LED | 3 EMERGENCY SPEAKER ALL SWITCH |
| 2 FIRE AND EMERGENCY 1-16 LEDs | 4 EMERGENCY SPEAKER SELECTORS |




- | | |
|-------------------------------|---------------------------|
| 1 FIRE SENSOR TERMINAL | 4 DC 24V OUTPUT CONNECTOR |
| 2 EMERGENCY SWITCHER TERMINAL | 5 FIRE SENSOR TERMINAL |
| 3 EXTENSION CONNECTOR | 6 DC 24V INPUT CONNECTOR |

 APPLICATIONS

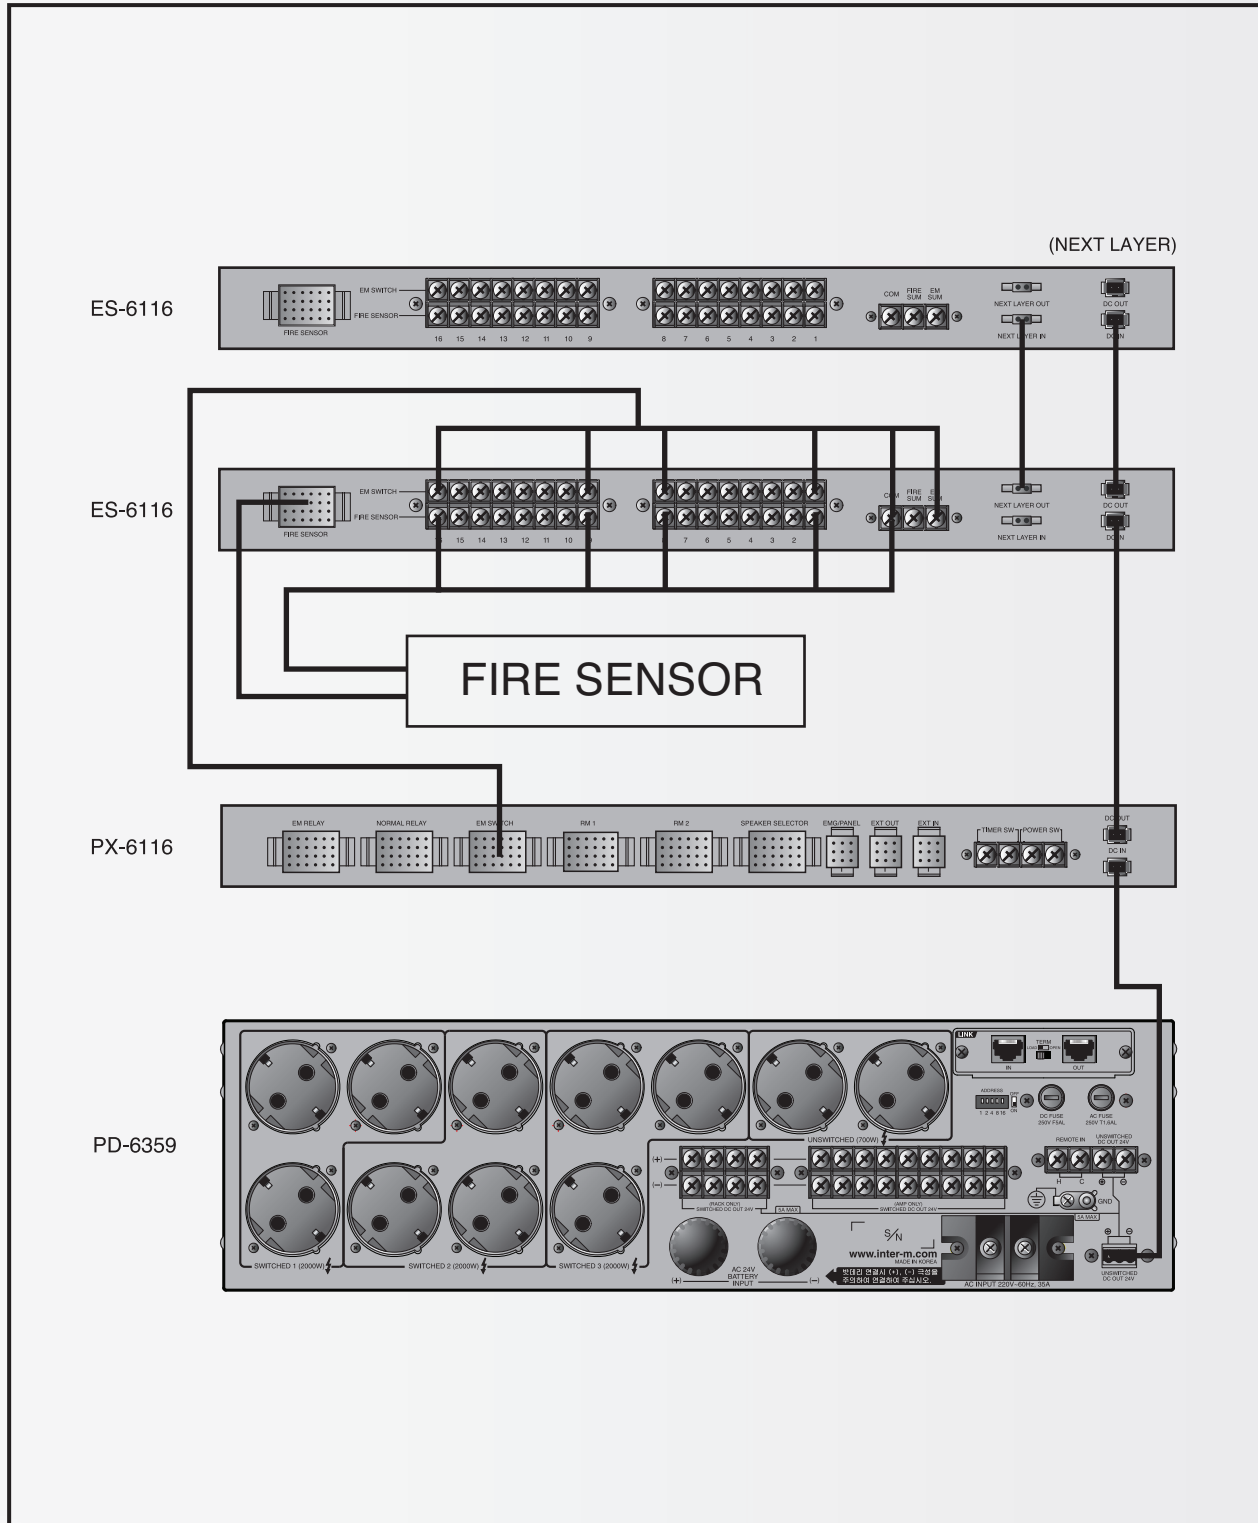


BLOCK DIAGRAM

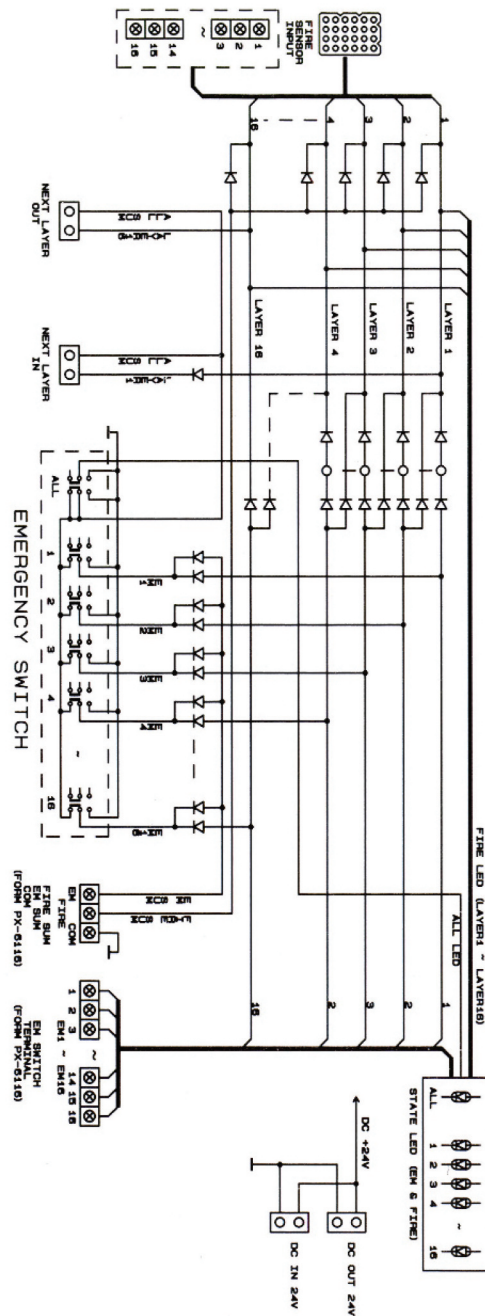 

SPECIFICATIONS

		ES-6116
ELECTRICAL	Fire Sensor	16 Line
	EM Speaker Relay Control	16 Line
	Indicator	All Mode 1
GENERAL	Power Source	24V DC
	Weight	3.1kg/6.8lb
	Dimensions	482(W)x44(H)x280(D)mm/19(W)x1.7(H)x11(D)in

 DIMENSIONS

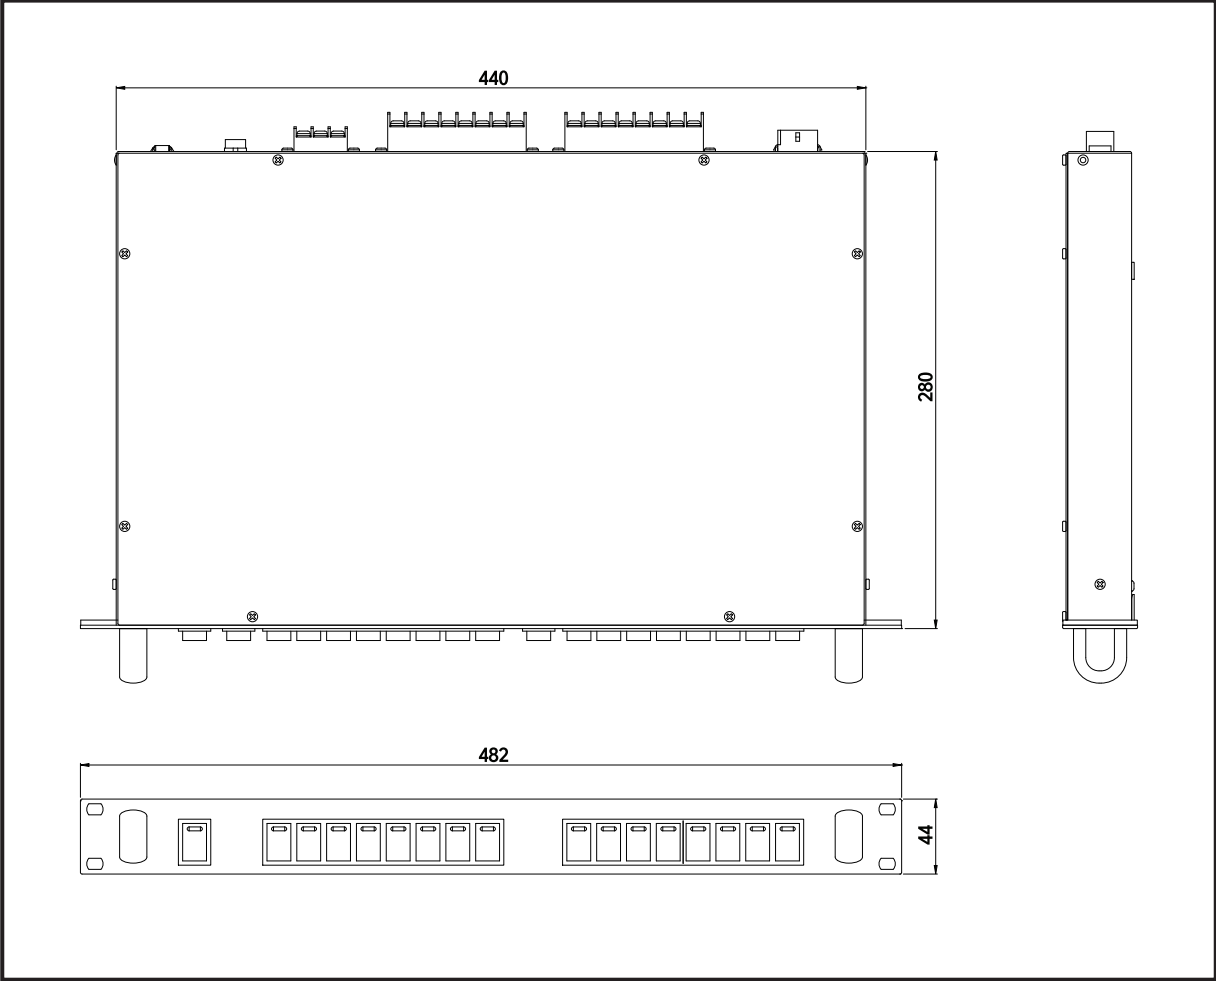



Inter-M Corp. (IMK)

719, Dobong-ro, Dobong-gu, Seoul, Korea
Overseas Sales Team

Tel_ +82-2-2289-8141~7 **Fax_** +82-2-2289-8149 **E-mail_** overseas@inter-m.com

www.inter-m.net

※ Design and specification are subject to be changed for the improvement of product quality without pre notice.

2022. 10. V1