 


Operation Manual

Program Exchanger

PG-6104



* Rack mount products in the Western Hemisphere(North America, South America, and the Caribbean) do not have handles installed due to customer preference.

interM

 
Welcome

A personal welcome to you from the management and employees of Inter-M

All of the co-workers here at Inter-M are dedicated to providing excellent products with inherently good value, and we are delighted you have purchased one of our products.

We sincerely trust this product will provide years of satisfactory service, but if anything is not to your complete satisfaction, we will endeavor to make things right.

Welcome to Inter-M, and thank you for becoming part of our worldwide extended family!

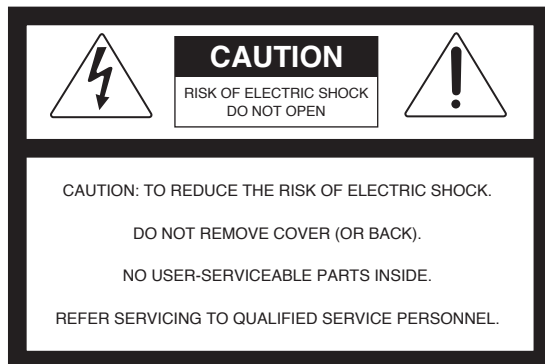

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

Caution: To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Attentions: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur, une prise de courant ou une autre sortie de courant, sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

*WARNING FOR YOUR PROTECTION PLEASE READ THE FOLLOWING-WATER AND MOISTURE: Unit should not be used near water(e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc). Care should be taken so than objects do not fall and liquids are not spilled into the enclosure through openings.

*Do not install this equipment in a confined space such as a book case or similar unit.

*This apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such vases, shall be placed on the apparatus.

*This apparatus shall be connected to a mains socket outlet with a protective earthing connection.

*It has heed to be easy to disconnect the device. To disconnect the device from power, separate AC input cable from inlet or unplug the AC Cord.

*The socket-outlet shall be installed near the equipment and shall be easily accessible.

CAUTION

*These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

NOTE

*This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Contents

Unpacking.....2

Installation

 Environment.....2

 Important Safety Instructions.....2

Features3

Operation3

Front Panel4

Rear Panel5

Suggestions for Rack Installation6

Applications7

Block Diagram8

Specifications9

Service

 Procedures.....10

 Schematic.....10

 Parts List10

Warranty10

Unpacking

Although your PG-6104 is neither complicated nor difficult to operate, we recommend you take a few minutes to read this brief manual and familiarize yourself with the important information regarding product features, setup and operation.

As with most electronic devices, we strongly recommend you retain the original packaging. In the unlikely event the product must be returned for servicing, the original packaging (or reasonable equivalent) is required.

Installation

Environment

Never place this product in an environment which could alter its performance or reduce its service life. Such environments usually include high levels of heat, dust, moisture, and vibration.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Features

- PROGRAM AUTO SELECTION

Remote, Timer, EM & Signal present by matrix and one input of them is selected automatically.

- PRIORITY ORDER

Outputs first signal and isolates late signal by priority order feature.

- QUADRUPLIX

4 inputs & outputs for quadruplex broadcasting of school, hotel, department store etc.

- INDICATOR

Each indicator indicates signal type of each broadcasting.


Operation

1. When power on the power distributor (PD-6359 Inter-M product), the power LED of this equipment should be illuminated.
2. Turn on the power of all equipments in rack system and check BGM output.
3. If system is normal, turn on remote 2 and check remote output.
4. If remote 2 are normal, operate remote 1, timer, EM by priority order and check output by program changes.
5. If system is not working, check DC voltage and matrix connector pin.

※ PGM Exchanger order

Order	Input Signal
1	Emergency Input
2	Timer Input
3	Remote 1 Input
4	Remote 2 Input
5	Pre-Amp Input

 Front Panel

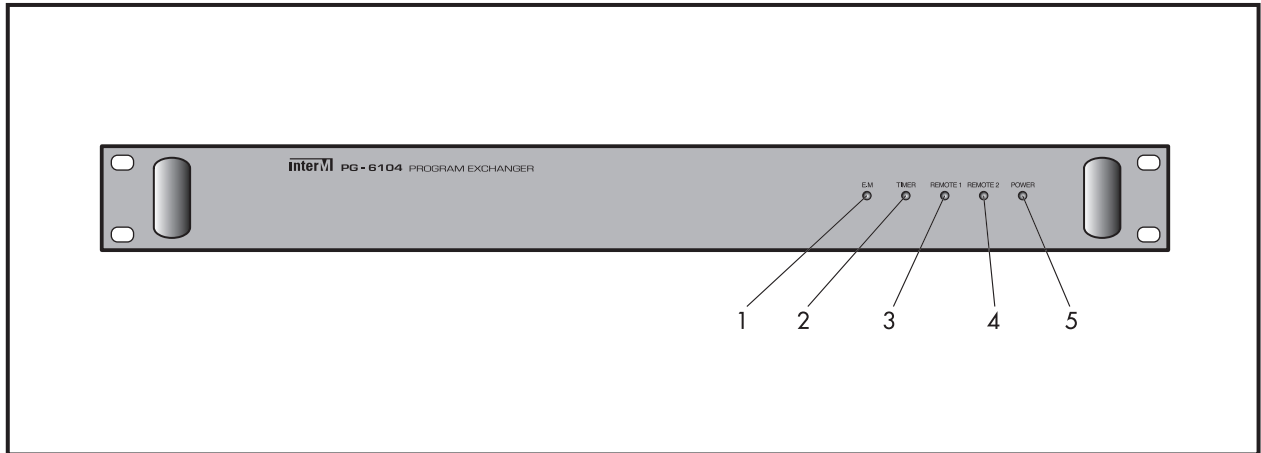

1. EM LED

Illuminates when emergency broadcasting is working.

2. TIMER LED

Illuminates when auto timer is working.

3. REMOTE 1 LED

Illuminates when remote 1 is working.

 
4. REMOTE 2 LED

Illuminates when remote 2 is working.

5. POWER LED

Illuminates when the power is on or power distributor's (PD-6359) power on.

Rear Panel

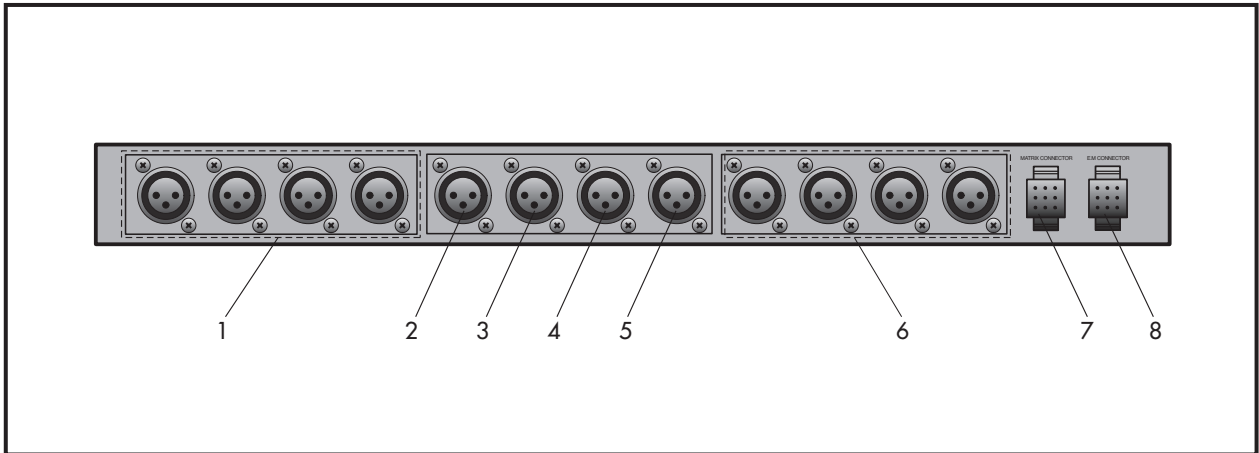

1. LINE OUTPUT JACK

Distributes each output to the main amp.
If you use unbalance, “-” and “G” have to be linked.

2. REMOTE 2 JACK

Connect to output jack 2 of remote RM-6016 (Inter-M product).

3. REMOTE 1 JACK

Connect to output jack 1 of remote RM-6016 (Inter-M product).

4. TIMER JACK

Connect to output jack of timer RM-6016 (Inter-M product).

5. EM JACK

Connect to Emergency output jack of RM-6016 (Inter-M product).

6. LINE INPUT JACK

Connect to output of pre amp or mixing consol. This jack is balanced (+, -, G) and can be connected to four signals. If you use unbalance, “-” and “G” have to be linked.

7. EM CONNECTOR

Connect to matrix connector of EP-6216 (Inter-M product).

 
8. MATRIX CONNECTOR

Connect to EMG jack of ECS-6216P (Inter-M product).


Suggestions for Rack Installation

1. Unplug or power off before installation.
2. Connect matrix connector of this equipment to EMG connector of ECS-6216P (Inter-M product).
3. Connect LINE IN to pre amp's output and LINE OUT to main amp's input.
4. Connect EM jack of program input to output of EP-6216 (Inter-M product). Timer jack to output of PW-6242A (Inter-M production), RM 1 & 2 to output of RM-6024 (Inter-M product).
5. Connect EM connector to EM matrix.


※ Pin number & features of matrix connector

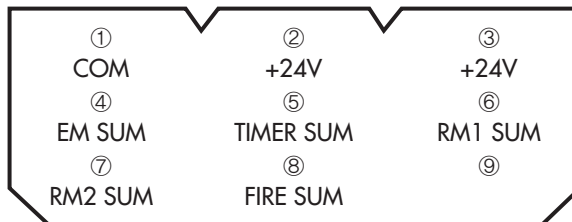

Applications

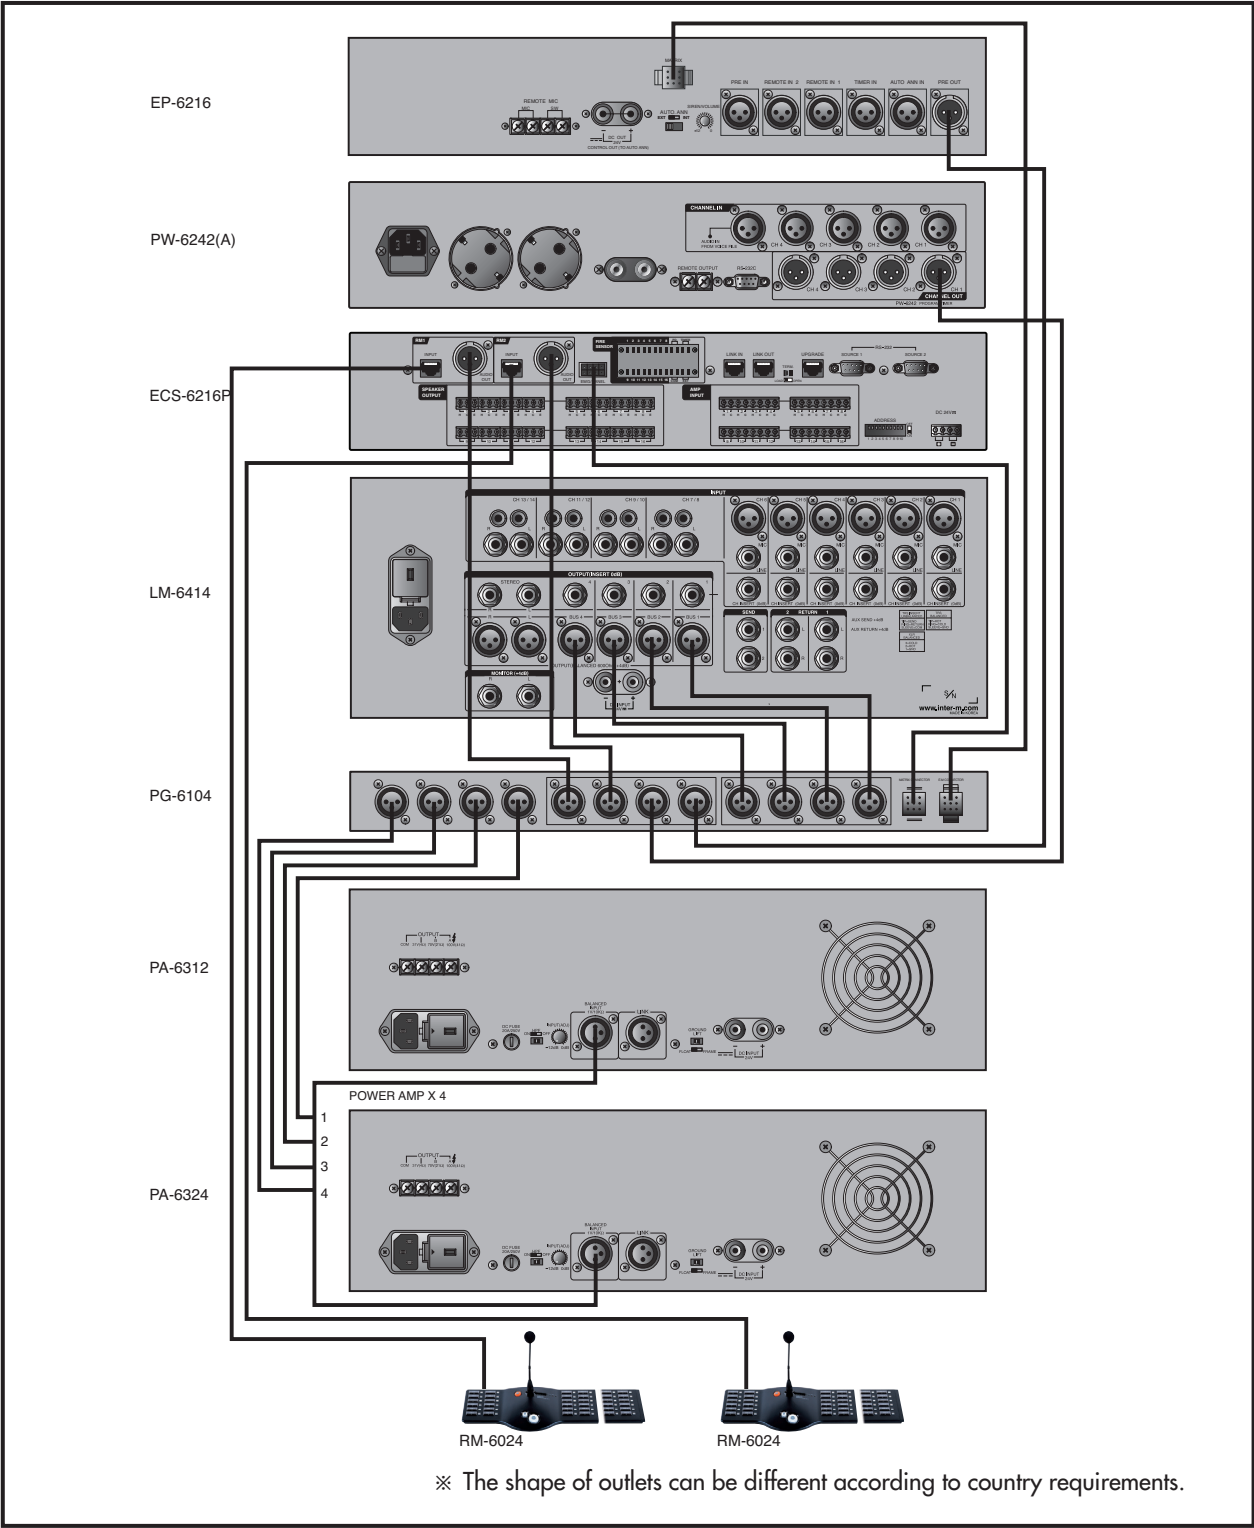 

Block Diagram

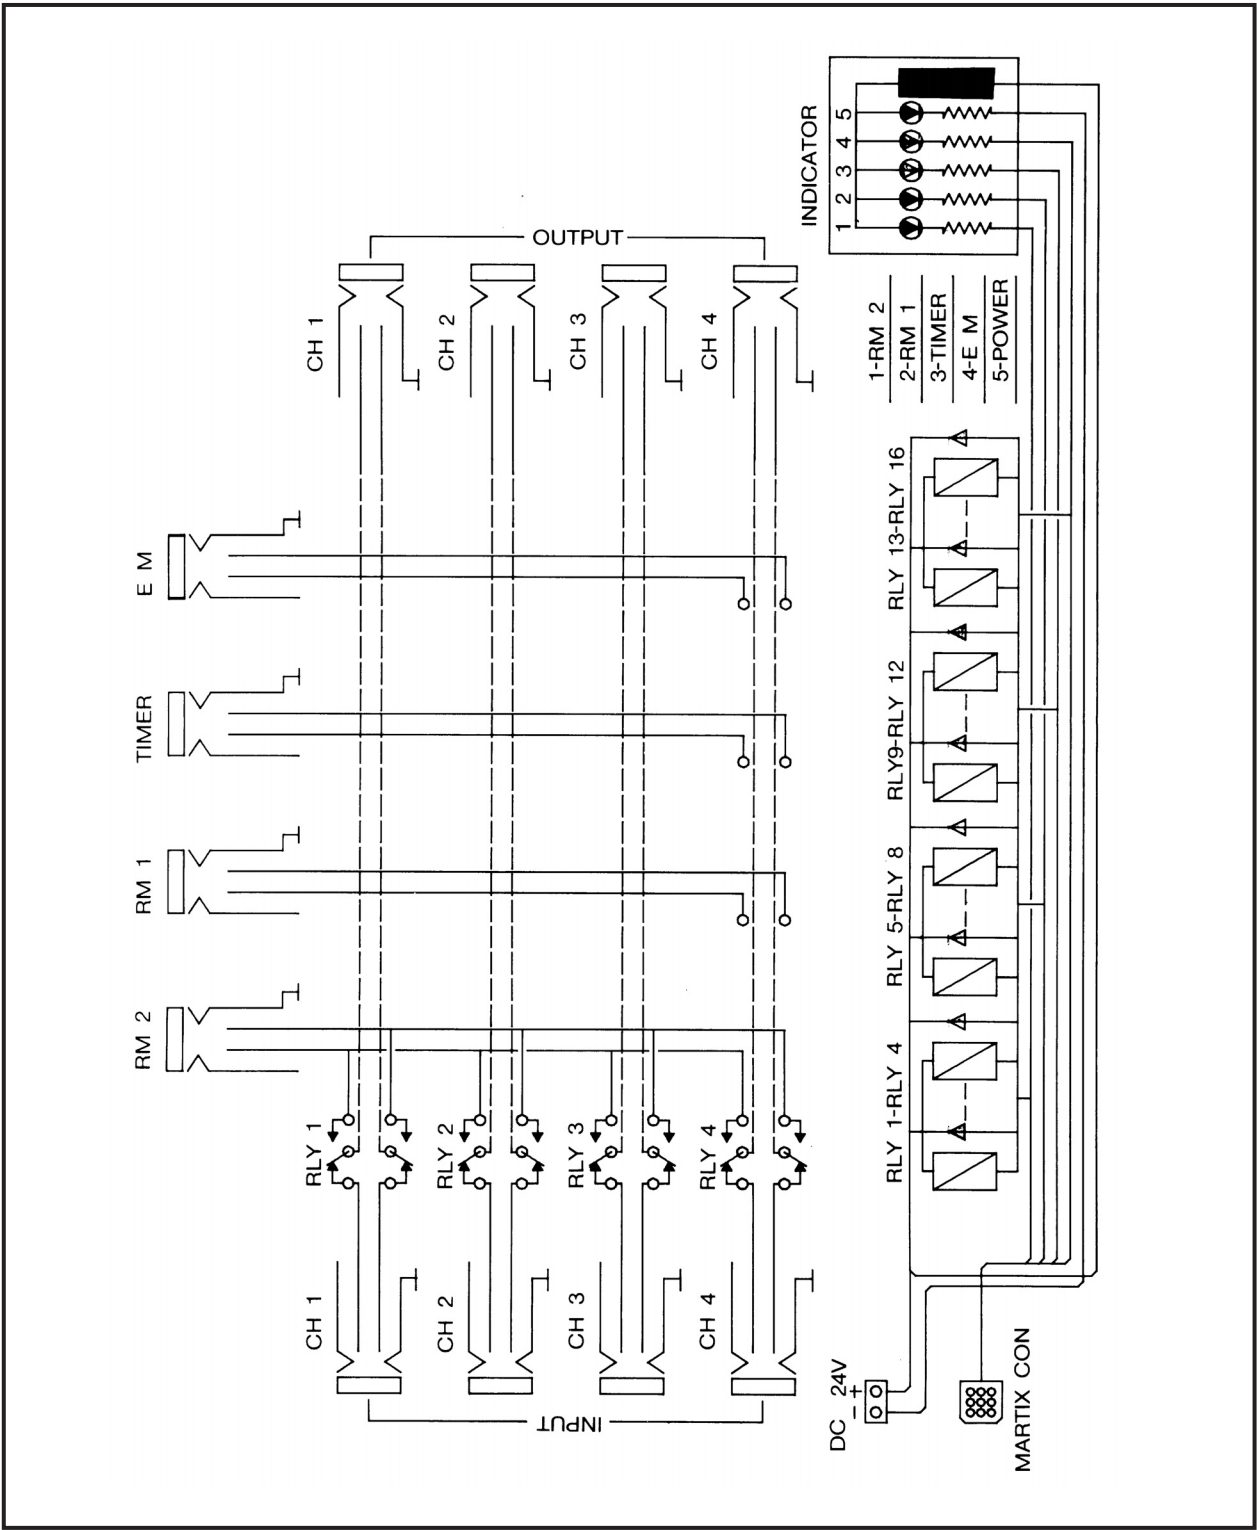 


Specifications

	PG-6104
Activation	Auto
Program Exchanger	5 Circuits
Indicator	Power LED, R.M 1 & 2 LED, Timer LED, E.M LED
Power Source	24V DC
Weight (SET)	5kg/11lb
Dimensions (SET)	482(W)x44(H)x280(D)mm/19(W)x1.7(H)x11(D)in

* Specifications and design are subject to change without notice.

 ※ DIMENSIONS

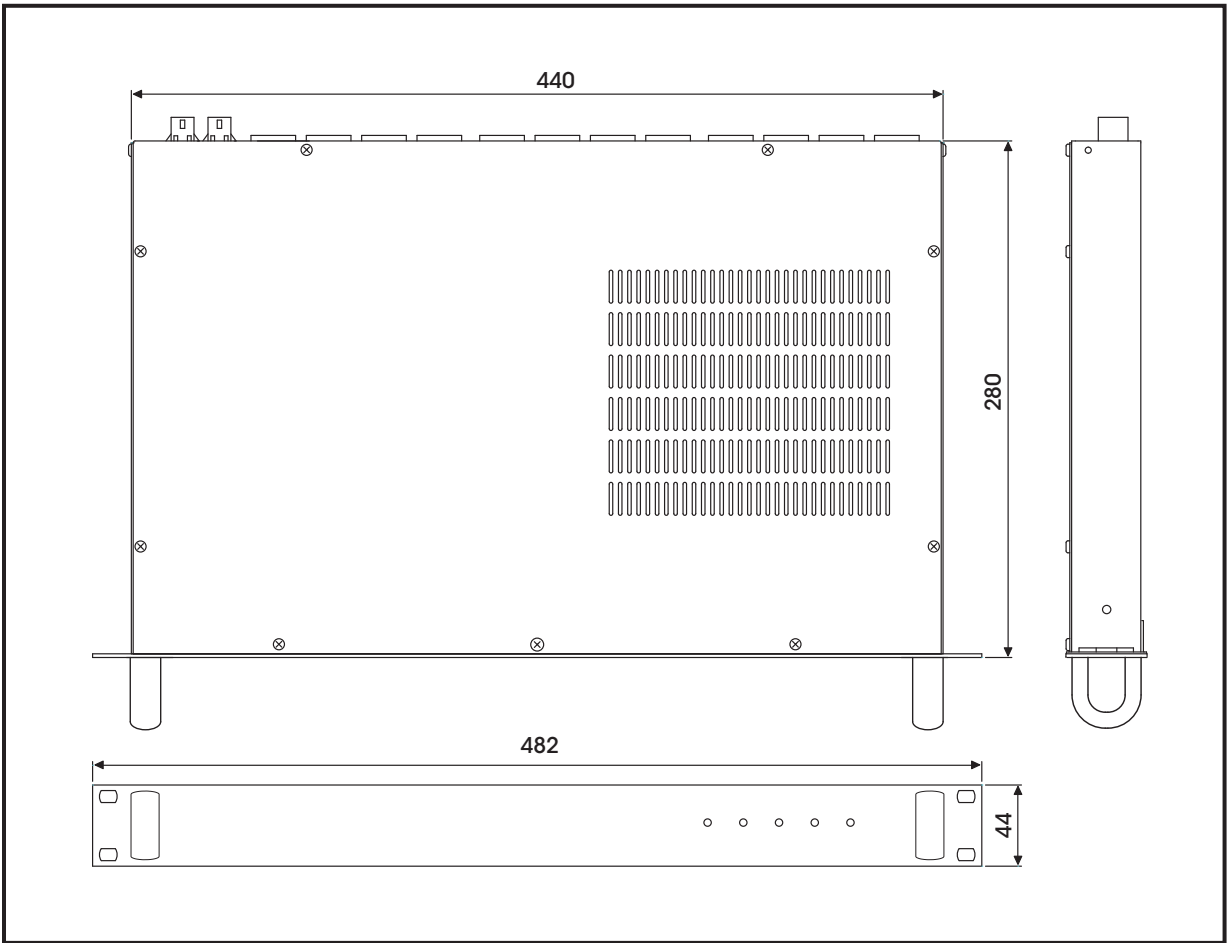

Service

Procedures

Take steps to insure the problem is not related to operator error or other products within the system. Information provided in the troubleshooting portion of this manual may help with this process. Once it is certain that the problem is related to the product contact your warranty provider as described in the warranty section of this manual.

Schematic

A Schematic is available by contacting your warranty provider.

Parts List

A Parts List is available by contacting your warranty provider.

Warranty

Warranty terms and conditions vary by country and may not be the same for all products. Terms and conditions of warranty for a given product may be determined first by locating the appropriate country which the product was purchased in, then by locating the product type.

To obtain specific warranty information and available service locations contact Inter-M directly or the authorized Inter-M Distributor for your specific country or region.



Inter-M, Ltd. (Korea) began operations in 1983.

Since then, Inter-M has grown to become one of the largest manufacturers of professional audio and commercial sound electronics equipment in the world.

Inter-M has gained worldwide recognition for its own branded products, as well as private label manufacturing of electronics sold under other names (OEM).

The company is no longer just a Korean company, but rather a global company that is truly international in scope, with factories and offices in Korea and China, and sales and marketing operations located in Japan, Europe, and the U.S.A.

With more than 850 employees around the globe, Inter-M is well-poised for further growth and expansion.

Inter-M Americas, INC.

5666 CORPORATE AVE. CYPRESS, CA 90630

TEL : +1-714-828-2200, FAX : +1-714-828-2210

Home Page : <http://www.inter-m.net>, E-mail : info@inter-m.net

Inter-M Corporation

SEOUL OFFICE : 719, DOBONG-RO, DOBONG-GU, SEOUL, KOREA

TEL : +82-2-2289-8140~8, FAX : +82-2-2289-8149

Home Page : <http://www.inter-m.com>, E-mail : overseas@inter-m.com

MADE IN KOREA

July 2021