

Operation Manual

Network System Remote Mic Station

RM-S1000



interM

Welcome

A personal welcome to you from the management and employees of Inter-M

All of the co-workers here at Inter-M are dedicated to providing excellent products with inherently good value, and we are delighted you have purchased one of our products.

We sincerely trust this product will provide years of satisfactory service, but if anything is not to your complete satisfaction, we will endeavor to make things right.

Welcome to Inter-M, and thank you for becoming part of our worldwide extended family!



WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

Caution: To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Attentions: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur, une prise de courant on une autre sortie de courant, sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.
Pour déconnecter complètement l'appareil du réseau d'alimentation, déconnecter le cordon d'alimentation de la prise murale.
La prise du réseau d'alimentation doit demeurer aisément accessible.

*WARNING FOR YOUR PROTECTION PLEASE READ THE FOLLOWING-WATER AND MOISTURE: Unit should not be used near water(e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc). Care should be taken so than objects do not fall and liquids are not spilled into the enclosure through openings.

*Do not install this equipment in a confined space such as a book case or similar unit.

*Warning : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

*This apparatus shall be connected to a mains socket outlet with a protective earthing connection.

*To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle.

*The mains plug of the power supply cord shall remain readily accessible.

CAUTION

*These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

NOTE

*This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Contents

Unpacking	2
Installation	
Environment.....	2
Important Safety Instructions.....	2
Features	3
Contents and Accessories	3
Front Panel	4
Rear Panel	6
How To Set Up The Device And Precautions	8
Applications	15
Block Diagram	16
Specifications	17
Service	
Procedures.....	19
Schematic.....	19
Parts List	19
Variations and Options	19
Warranty	19

Unpacking

Although your RM-S1000 is neither complicated nor difficult to operate, we recommend you take a few minutes to read this brief manual and familiarize yourself with the important information regarding product features, setup and operation.

As with most electronic devices, we strongly recommend you retain the original packaging. In the unlikely event the product must be returned for servicing, the original packaging (or reasonable equivalent) is required.

Installation

Environment

Never place this product in an environment which could alter its performance or reduce its service life. Such environments usually include high levels of heat, dust, moisture, and vibration.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Features

- BROADCAST PAGING VIA NETWORK

Paging broadcasting can be done by connecting to the server controller equipment.

- GOOSENECK MICROPHONE

You can use the gooseneck microphone to broadcast paging in each area.

- 0~9 KEY, ALL, TALK, CHIME BUTTON

You can select the broadcasting area simply by using the 0~9 key and the All button. In addition, you can set the operation mode of the Talk button and the Chime button.

- 2.43 INCH OLED DISPLAY

You can check and set the status of the device through the display.

- OUTPUT LEVEL METER

You can check the output level through the level meter.

- MONITOR SPEAKER

You can check the current output in real time through the monitor speakers.

- INPUT/OUTPUT ADJUSTMENT VOLUME

You can adjust the MIC input gain and monitor speaker output, Chime, and AUX volume.

- DC 24V POWER INPUT

Since there is a DC 24 V power input terminal, you can input the power using the adaptor.


- POWER SUPPLY USING POE (POWER OVER ETHERNET)

In locations featuring a PoE, you can supply power using the PoE without going through a dedicated adapter. (PoE supplies Primary only.)

Contents and Accessories

1. DC Adapter x 1EA
2. Gooseneck Microphone x 1EA
3. User Manual x 1EA

Front Panel

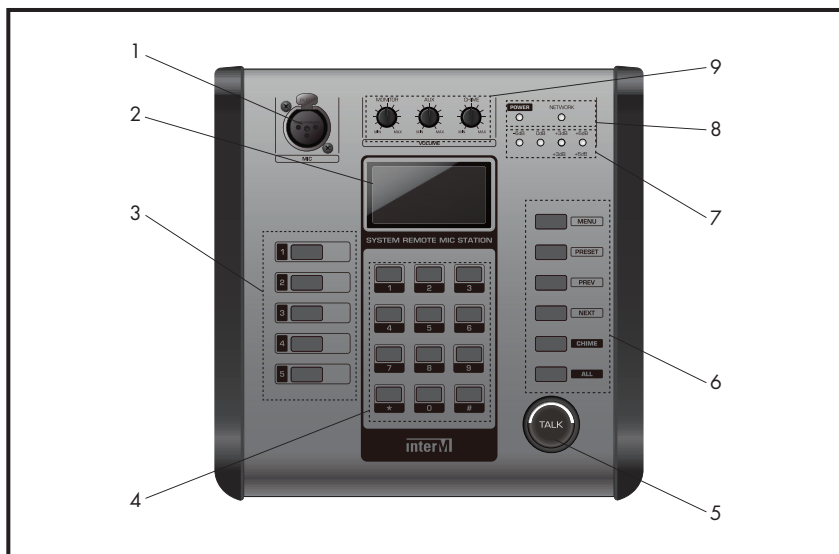

1. MIC INPUT TERMINAL

This is the terminal to connect the gooseneck microphone.

2. OLED DISPLAY

The organic light-emitting diode (OLED) displays the current status and settings of the device.

3. INPUT SHORTCUT BUTTONS

CP Event 1~5 / SIP Hotkey 1~5 button

4. 0~9 / * / # BUTTON

You can use the buttons to select the number of broadcasting areas or various modes.

5. TALK BUTTON

Press the button to start broadcasting after selecting a broadcasting area. Refer to the 5. Talk Type Settings on page 14 of this manual for detailed information about the Talk button settings.

6. MENU / PRESET / PREV / NEXT / CHIME / ALL BUTTON

- 1) MENU / PREV: You can use MENU / PREV to select the setting menu or return to the standby screen.
- 2) PREV/NEXT: If there are 8 or more numbers registered in the Number Input screen, you can use PREV / NEXT as a Scroll button.
- 3) CHIME: You can use this button to activate a CHIME that signals the beginning or end of a broadcast. Refer to the 4. Chime Set on page 13 of this manual for detail information about the CHIME settings.
- 4) ALL: This button is used after setting the broadcasting area with CP event in the event & preset setting menu of the controller.
- 5) PRESET: When selected on the standby screen, Talk Protocol is changed.
(It rolls in the order of Isls-CP, Isls-Group, Isls-Zone, and SIP.)

7. LED INDICATOR

You can check the output level through the level meter.


8. POWER AND COMMUNICATION LED INDICATOR

It is the LED that shows the power status and communication status. The power LED is lit when power is applied, and the communication LED is lit to indicate Primary/Secondary operating status.

9. MONITOR / AUX / CHIME VOLUME

This volume controls the MONITOR/AUX/CHIME output.

Rear Panel

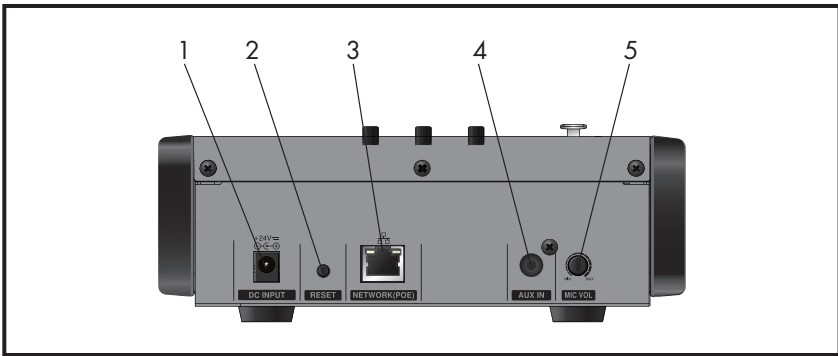

1. DC 24V INPUT TERMINAL

This is a DC 24 V power supply terminal. You can input power by using the adaptor.

2. RESET SWITCH

Press more than 10 seconds to reset the device to the factory settings.

3. NETWORK (PRIMARY & SECONDARY) CONNECTING TERMINAL


It is a terminal to connect the device to the network. You can control the broadcasting by using integration software.

※ For more information on how to set up, refer to the integration software manual. Download the manual at home page. (www.inter-m.net)

■ LINK
■ ACT



PIN NO	DATA @ 100 Base-T	DATA @ 1G Base-T	POE
1	TX+	MX0+	+
2	TX-	MX0-	+
3	RX+	MX1+	-
4	NC	MX2+	+
5	NC	MX2-	+
6	RX-	MX1-	-
7	NC	MX3+	-
8	NC	MX3-	-

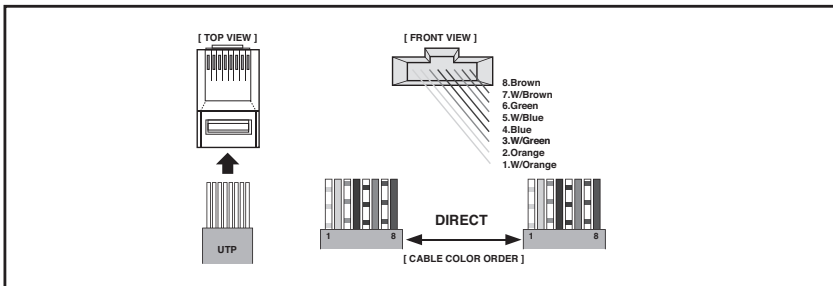

4. AUX INPUT TERMINAL

You can use this terminal to use the AUX IN jack to input an external sound source and broadcast.

5. MIC GAIN ADJUSTMENT VOLUME


This is the volume that adjusts the input GAIN of the microphone.

How To Set Up The Device And Precautions


1. BOOT SCREEN: AFTER THE POWER SUPPLIED TO THE DEVICE, AN APPROPRIATE DESCRIPTION DISPLAY ON THE BOOT SCREEN.

- INITIAL SCREEN

- 1) A "Welcome" message will appear on the screen during the booting and OS initialization process.
- 2) When the app is launched, the message will disappear for 5 seconds, then reappear on the screen.

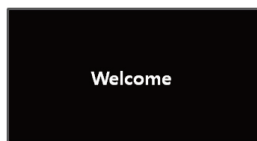


- 3) When the app is launched after OS initialization, a "Booting..." , " Initializing..." message will appear on the screen. (Takes approximately 30 seconds)

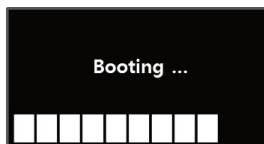

- STANDBY SCREEN

- 1) When booting is complete, the standby screen will appear. If the device is connected to a network, the IP will appear on the screen. (Initial IP: 192.168.1.99)


The operation mode at the top right indicates the operation mode according to the Talk Protocol.
(Factory default: Zone mode)

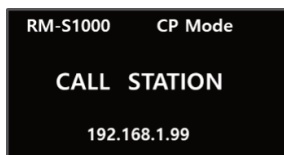


IsIs-CP



IsIs-Group

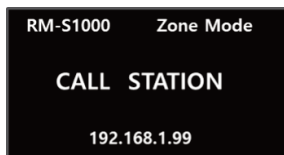

IsIs-Zone

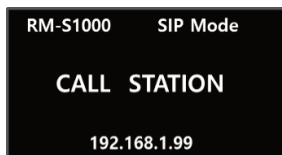

SIP




※For Talk Protocol setting, please refer to this manual 6. Talk Protocol.

※ IP change is available on the web page of the device. For details, please refer to the software manual.


- 2) Before using the device, it is necessary to register the device and source (RM) using the integrated management software.
 ※ For details, refer to the integrated management software manual.
- 3) Event & Preset can be set in the system setting menu of the integrated management software.
- 4) If there is no input for 30 seconds in the standby screen, it is converted to the Sleep screen.



- 5) If you select any key on the front in the sleep state, it will be converted to the standby screen.
- 6) You can change the Talk Protocol by selecting the PRESET Key on the standby screen.
 (Easy change without entering the setting menu)

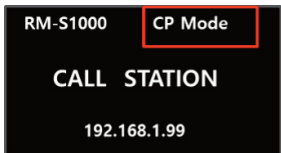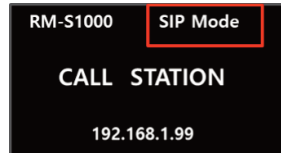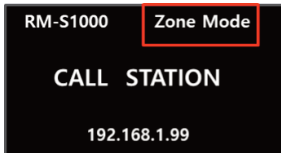





- 7) When receiving a SIP call from the standby screen, it is converted to the call receiving screen.

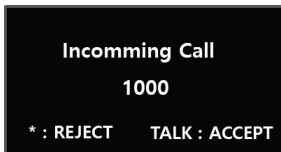


2. BROADCASTING FUNCTION: THIS FUNCTION ALLOWS YOU TO SELECT THE AREA TO BROADCAST.

- NUMBER INPUT SCREEN

- 1) When you select any number key on the standby screen, it switches to the number input screen, which displays your input number.
- 2) VP, Group, Zone, and SIP are displayed on the Number input screen according to the Talk Protocol setting.

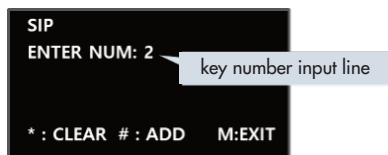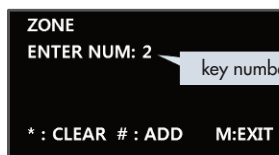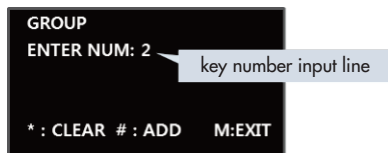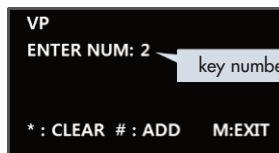


- 3) Pressing the MENU Key on the Number input screen converts to the standby screen. (M: EXIT)

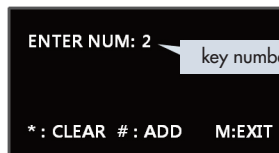

- 4) Enter the number you want to broadcast.
- 5) If an incorrect number is entered during input, it can be deleted by selecting the * Key. (Backspace role)
- 6) After entering the number you want to broadcast, select the # key to complete the input. (Add)




- 7) Multiple numbers can be registered by repeating steps 4) to 6). (except SIP mode)
- 8) If you want to cancel after adding the number to be broadcasted, it will be deleted when you re-enter the same number. (Remove)

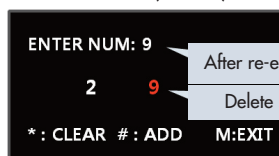

- 9) After inputting the number to be broadcasted on the input screen, you can broadcast by selecting the Talk Key.


- TALK SCREEN

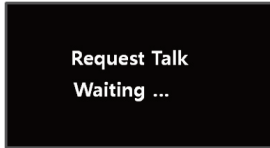


- 1) The Request screen will appear when you enter the desired Number to broadcast and select the Talk Key.
- 2) If it is not registered as an RM source device, the CANCEL button is displayed after displaying for 1.5 seconds. (When the CANCEL button is selected, it is converted to the standby screen.)
It is registered as a source device and the Talk screen is displayed when the event & preset, Zone, and Group operate normally.



- 3) You can modify the MIC Mute On/Off settings by using the * key.
- 4) You can modify the AUX Mute On/Off settings by using the # key.
- 5) You can't set Mute as On for both MIC and AUX at the same time.
- 6) According to the talk type during the broadcast, when the Talk button is operated, the standby screen is switched after the broadcast ends.
※ For Talk Type setting, refer to 5. Talk Type Setting on page 14 of this manual. (except for SIP Mode)
- 7) If the Talk Protocol is SIP Mode, send a SIP Call after entering the number registered in the SIP Account list.

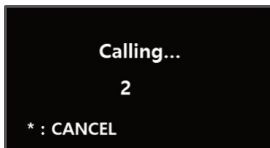

- 8) When SIP Call is connected, the call screen is displayed.

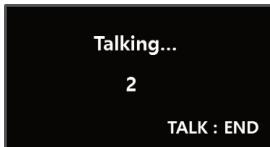


- ※ In case of SIP Local Call (Call with IP address), it must be configured with a dedicated LAN network.
- ※ 1:N is not supported in case of SIP Local Call (Call with IP address) between Remote Mic.

3. SHORT KEY, CP EVENT 1~5 KEY / SIP HOTKEY 1~5.


- 1) These are 1~5 Keys on the left side of the front. If you press 1~5 Key, the corresponding number is input.



- 2) This is the screen when selecting No. 2 Key among No. 1~5 Keys on the left.
- 3) In the case of Isls-CP, Isls-Group, and Isls-Zone, the Talk Protocol setting is used as CP Event.

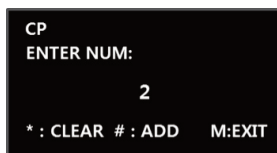

- 4) If the Talk Protocol setting is SIP, SIP Hotkey is used.

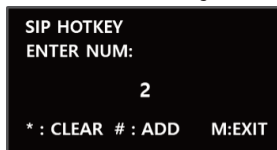


4. CHIME SET: SETUP MENU WHEN YOU SELECT THE MENU BUTTON FROM THE STANDBY SCREEN

Chime operates in Manual Mode.

When you select the Chime button on the Talk screen, odd-numbered Start Chimes and even-numbered End Chimes occur.

- START CHIME SET

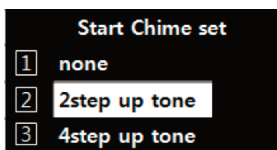


- 1) Press the number button 1 to select none.
- 2) Press the number button 2 to select the 2Step up tone.
- 3) Press the number button 3 to select the 4Step up tone.
- 4) If you select the MENU button on the Start Chime Set screen, the End Chime Set screen is displayed

- END CHIME SET




- 1) Press the number button 1 to select none.
- 2) Press the number button 2 to select the 4Step down tone.
- 3) If you select the MENU button on the End Chime Set screen, the Talk Type Set screen is displayed.

5. TALK TYPE SET: YOU CAN SET HOW THE TALK BUTTON WORKS.

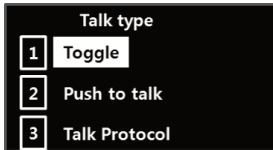


- 1) Press the number button 1 to select Toggle.
 - ※ If set to Toggle, press the Talk button once to enable RM broadcasting. Press the Talk button once again to end the broadcasting.
- 2) Press the number button 2 to select Push to Talk.
 - ※ If set to Push to Talk, the RM broadcast is output only while you press and hold the Talk button after selecting Zone. If the Talk button is Off, the broadcasting is ended.
- 3) Press the number button 3 to select the Talk Protocol menu.
 - ※ This is the Talk Protocol setting menu with the server controller device.
- 4) When you select the MENU button on the Talk type setting screen, the Network Info screen is displayed.

6. TALK PROTOCOL SETTING: SET TALK PROTOCOL WITH THE SERVER CONTROLLER DEVICE. (SIP EXCEPTION)

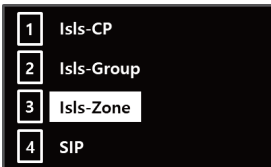


- 1) Press number button 1 to select IsIs-CP.
 - ※ Operates in CP Mode. When you select the Talk button after entering the number, the event & preset setting VP Event number of the integrated control software is transmitted.
- 2) Press the number button 2 to select IsIs-Group.
 - ※ Operates in GROUP Mode. When you press the Talk button after entering the number, it broadcasts to the Group set as the Group of the integrated control software.
- 3) Press number button 3 to select IsIs-Zone.
 - ※ Operates in Zone Mode. When you press the Talk button after entering the number, it broadcasts to the zone set as the zone of the integrated control software.
- 4) Press the number button 4 to select SIP.
 - ※ Operates in SIP Mode. After entering the number registered in the SIP Account list, press the Talk button to make a SIP call.
- 5) When the MENU button is selected, the Network Info screen is displayed.

7. NETWORK INFORMATION SCREEN: YOU CAN CHECK THE NETWORK INFORMATION OF THE DEVICE.

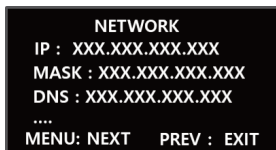


- 1) Pressing the MENU button on the Talk Type setting screen moves to the NETWORK information screen.
- 2) You can check Network information.

8. FIRMWARE VERSION CHECK: YOU CAN CHECK THE FIRMWARE VERSION INFORMATION.

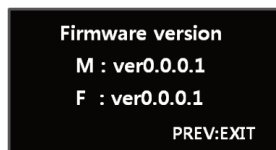


- 1) Press the MENU button on the Network Info screen to check the Firmware version.
 ※ M: Main board firmware version, F: Front board firmware version
- 2) Pressing the MENU button on the Firmware version screen converts to Start Chime Set, and pressing the PREV button moves from the menu screen to the standby screen.

Applications

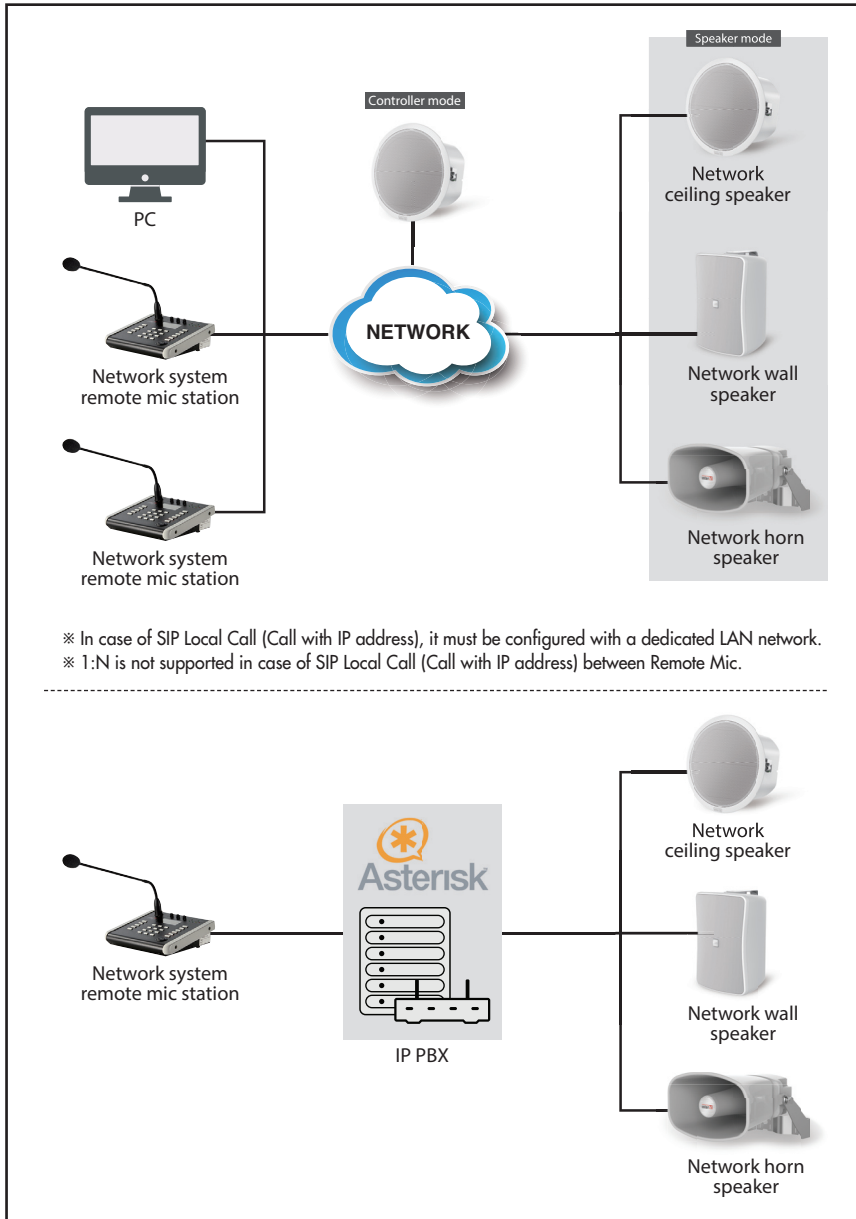

Block Diagram

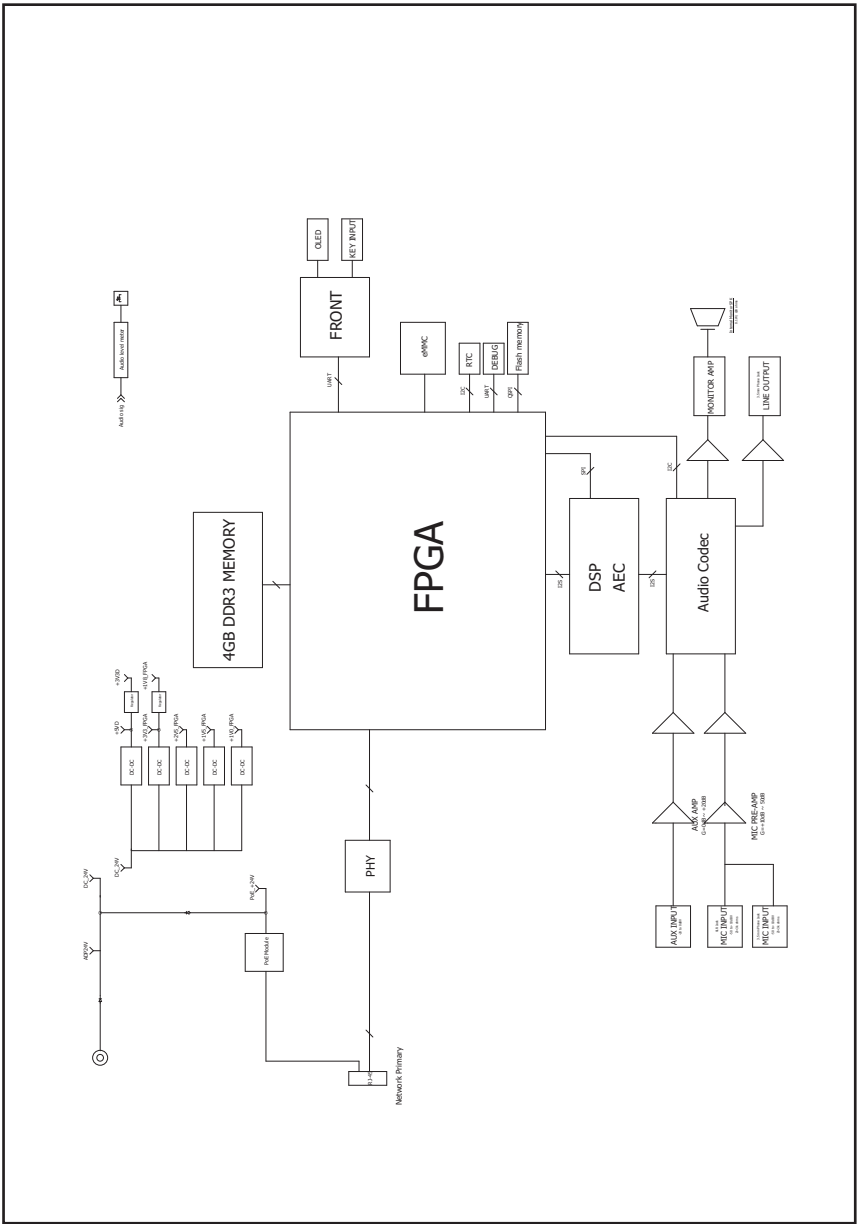


Specifications

		RM-S1000
Audio Feature		
MIC	Input Sensitivity	MIC Vol. Max: -48dBV $\pm$ 3dB MIC Vol. Min: -10dBV $\pm$ 3dB
	Signal-to-noise Ratio (20kHzLPF, A-wt)	More than 65dB
	THD (20kHzLPF)	Less than 0.1%
	Frequency Response 100Hz ~ 6kHz (Input: -48dBV, 1kHz)	0dB $\pm$ 3dB
AUX	Input Sensitivity	-10dBV $\pm$ 3dB
	Signal-to-noise Ratio (20kHzLPF, A-wt)	More than 75dB
	THD (20kHzLPF)	Less than 0.1%
	Frequency Response 100Hz ~ 18kHz (Input: -10dBV, 1kHz 기준)	0dB $\pm$ 3dB
Data Communication	Network Communication	100/1000 BASE-T (RJ-45)
Operating Temperature		-10℃ ~ +40℃
Power Source		DC24V
		POE (IEEE 802.3af) : 44~57VDC
Power Consumption		MAX 12W
Weight(Set)		1.3kg
Dimensions(SET)		200(W) x 73(H) x 206(D)mm

※ Design and specification are subject to be changed for the improvement of product quality without pre notice.

※ DIMENSIONS

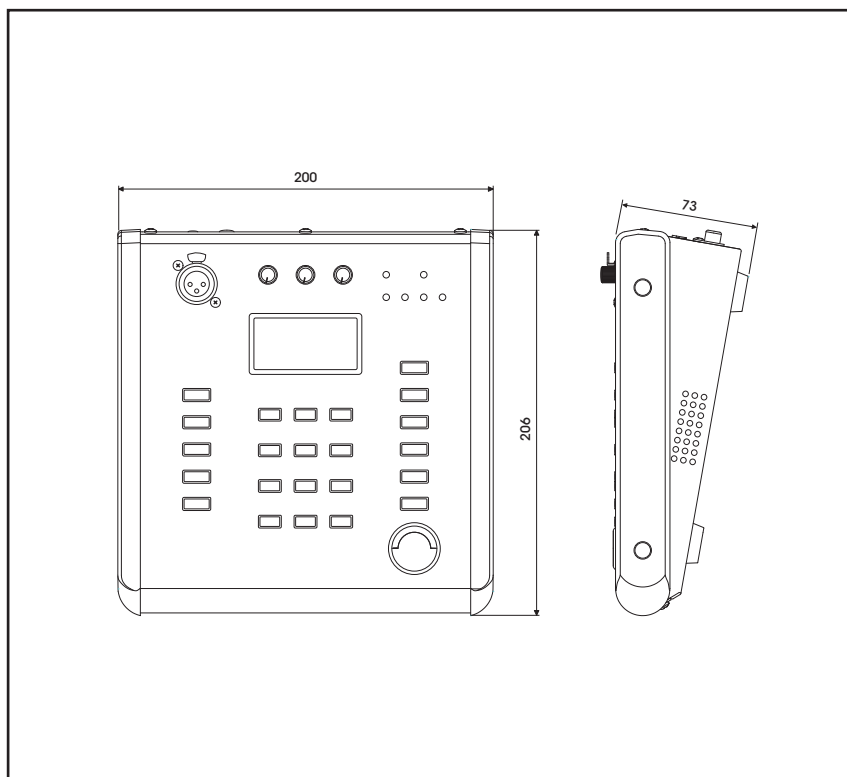

Service

Procedures

Take steps to insure the problem is not related to operator error or other products within the system. Information provided in the troubleshooting portion of this manual may help with this process. Once it is certain that the problem is related to the product contact your warranty provider as described in the warranty section of this manual.

Schematic

A Schematic is available by contacting your warranty provider.

Parts List

A Parts List is available by contacting your warranty provider.

Variations and Options

Variations

Products supplied through legitimate sources are compatible with local AC power requirements.

Options

No optional items are available for this product.

Warranty

Warranty terms and conditions vary by country and may not be the same for all products. Terms and conditions of warranty for a given product may be determined first by locating the appropriate country which the product was purchased in, then by locating the product type.

To obtain specific warranty information and available service locations contact Inter-M directly or the authorized Inter-M Distributor for your specific country or region.



Inter-M, Ltd. (Korea) began operations in 1983.

Since then, Inter-M has grown to become one of the largest manufacturers of professional audio and commercial sound electronics equipment in the world.

Inter-M has gained worldwide recognition for its own branded products, as well as private label manufacturing of electronics sold under other names (OEM).

The company is no longer just a Korean company, but rather a global company that is truly international in scope, with factories and offices in Korea and China, and sales and marketing operations located in Japan, Europe, and the U.S.A.

With more than 850 employees around the globe, Inter-M is well-poised for further growth and expansion.

Inter-M Corporation
SEOUL OFFICE : 719, DOBONG-RO, DOBONG-GU, SEOUL, KOREA
TEL : +82-2-2289-8140~8, FAX : +82-2-2289-8149
Home Page : <http://www.inter-m.com>, E-mail : overseas@inter-m.com

MADE IN KOREA
August 2023 158537